
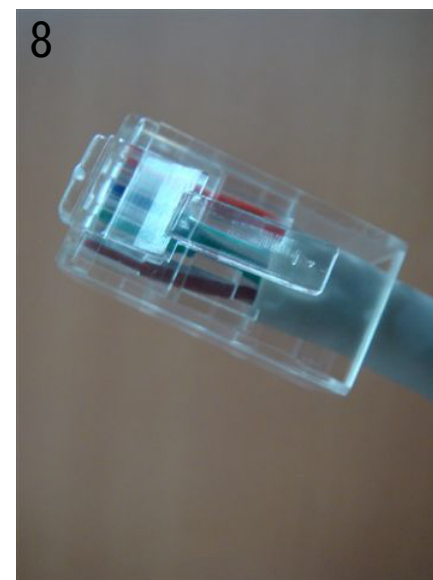
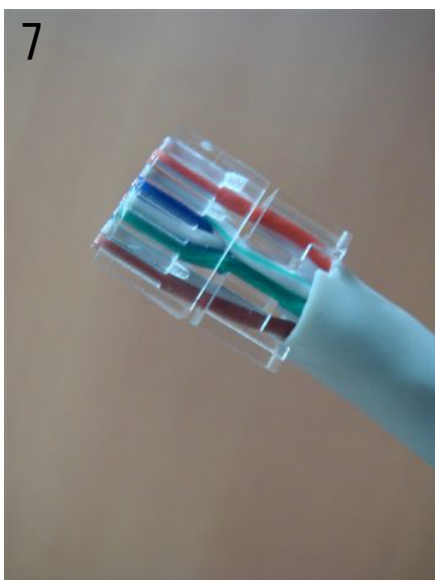
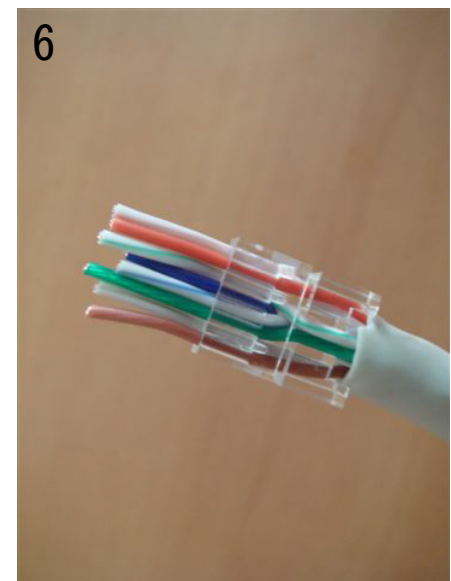
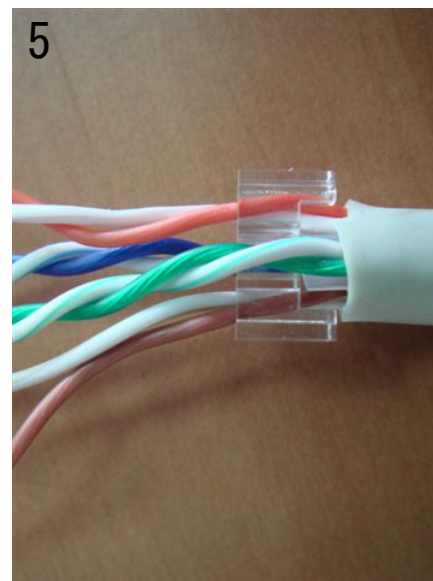








NEX1 カテゴリー6 単線 / より線両対応コネクタ NRJ3-45-C6 圧着手順

2010/02/12 千石電商

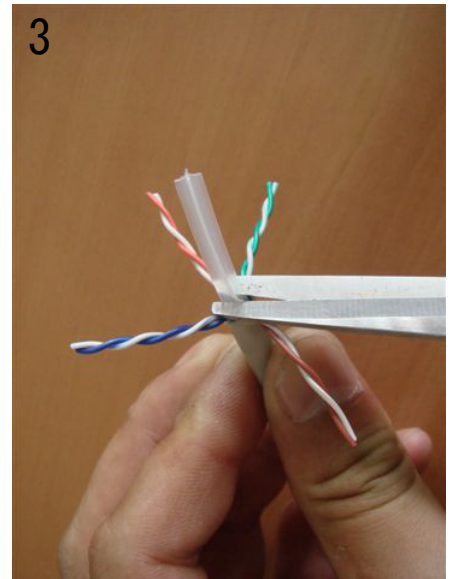

9

最後に工具で
かして完成

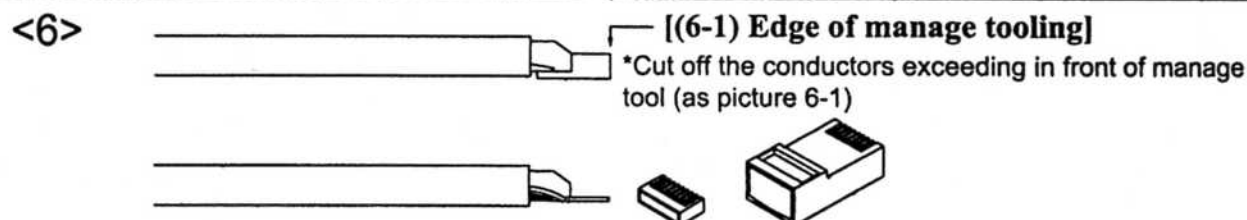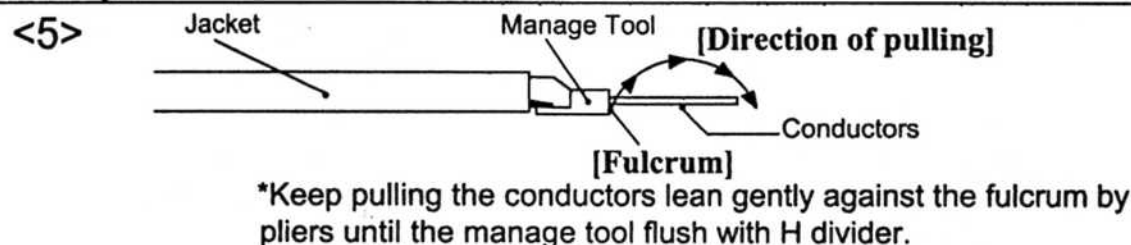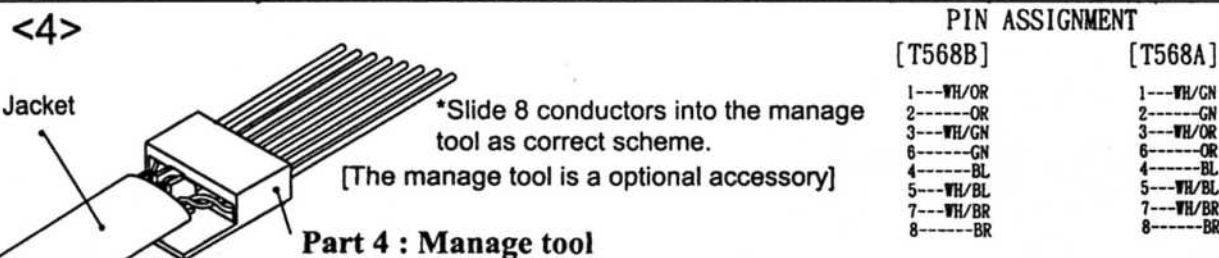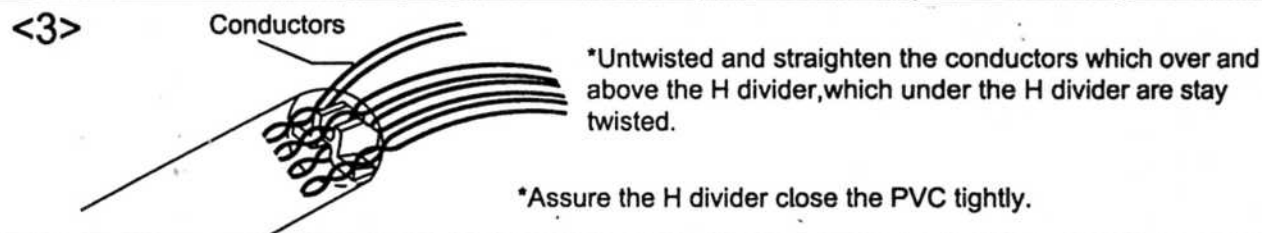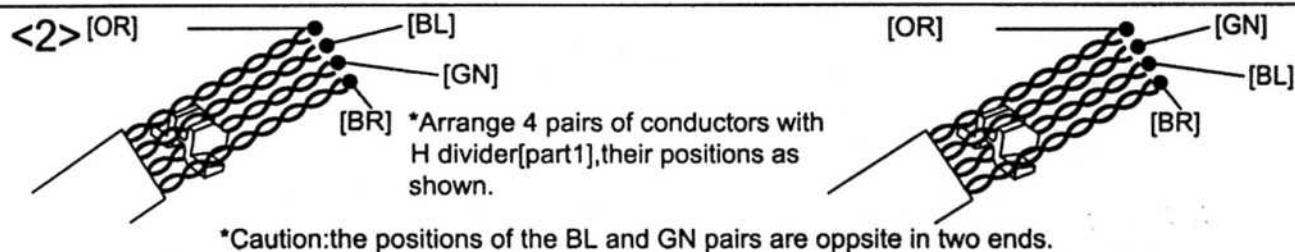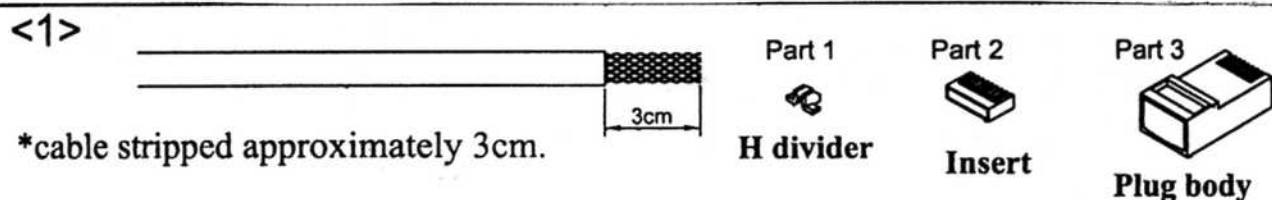

*Remove the manage tool and push the insert and cable into the plug body with precisely side, make sure it pushed all the way down to the end of housing to avoid the contact blades will not be connected well.

*Assembly completely with a crimp tool or terminal machine

[Suitable for 0.97mm~1.1mm inner conductor]

[Patent Panding]